

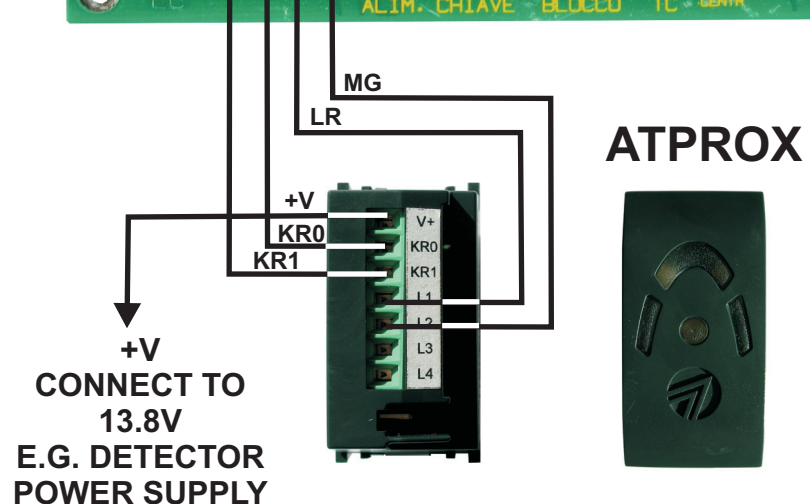
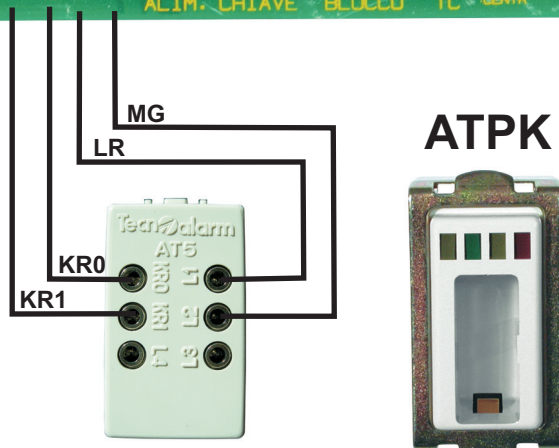



# CONNECTION OF THE ATPROX READER TO THE PERSONAL KEY BOARD

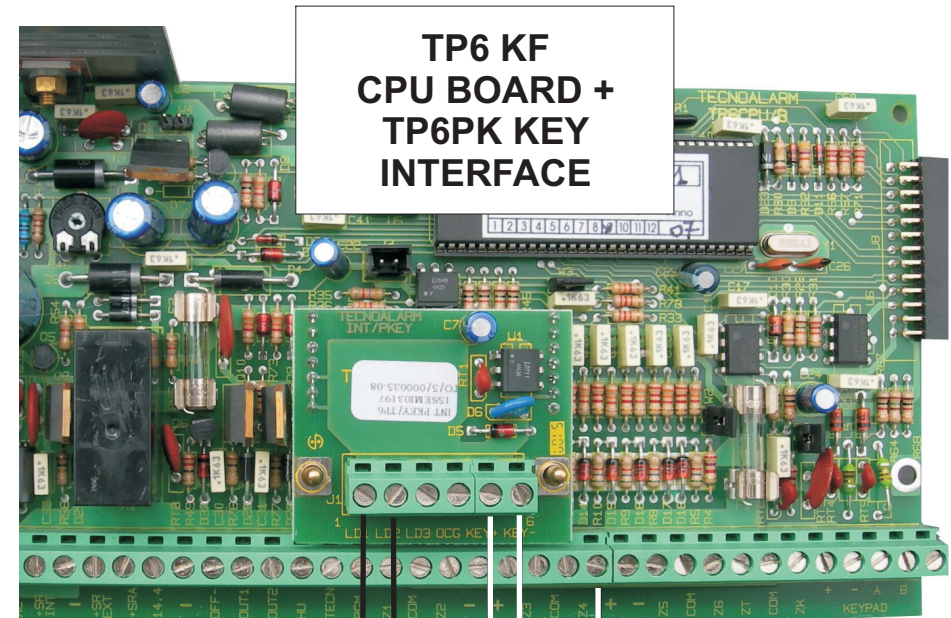


# CONNECTION OF THE ATPROX READER TO THE TP6 KF, TP12 CONTROL PANELS ETC.

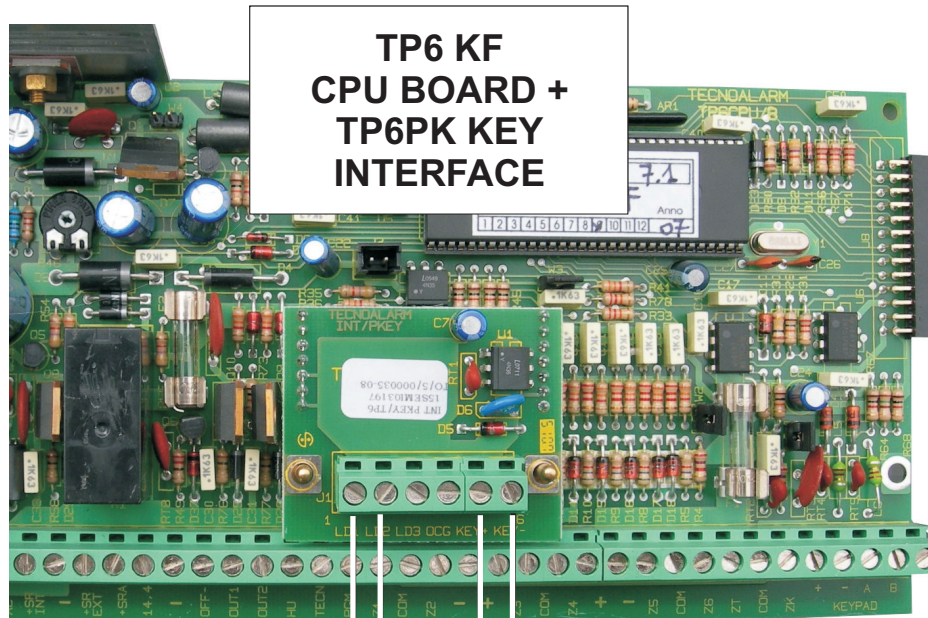

ATPK

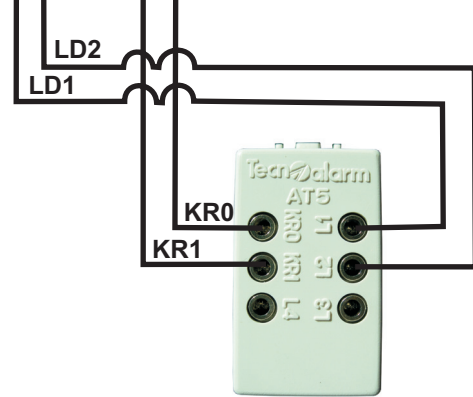

ATPROX

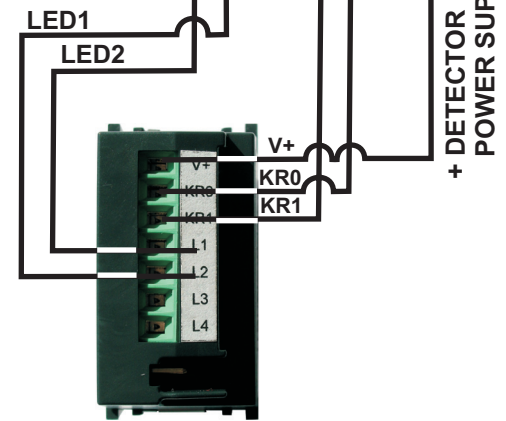

# COPYING THE CODE OF A PERSONAL KEY INTO A PROXKEY TRANSPONDER



**PRESS P2 (COPY MPKEY/PKEY)  
CODE TRANSFER**